Removable Plugs

Quick Link: api-usa.com/4300

0-100 mV to 0-300 VDC, Bipolar Voltages, 0-1 mA to 0-1000 mADC Input:

**Output:** 0-1 V to ±10 VDC or 0-1 mA to 4-20 mA

- Removable Plugs for Faster Installation
- Full 1200 V Input/Output/Power Isolation
- Input and Output LoopTracker<sup>®</sup> LEDs
- Functional Test Button with Remote Capability
- Built-In Loop Power Supplies for Input and Output

- Convert, Boost, Rescale Process Signals
- Isolate Single-Ended (Common Ground) PLC Inputs
- Interface Process Signals with Panel Meters, PLCs, Recorders, Data Acquisition, DCS, and SCADA Systems

### **DC Input Range**

Factory configured, please specify input range or consult factory for special ranges.

See table on other side for common ranges.

Voltage: 0-100 mVDC 0-300 VDC Bipolar voltage: ±100 mVDC to ±10 VDC 0-1 mADC 0-1000 mADC Current: to

# Input Impedance (Voltage)

200 k $\Omega$  minimum

### Input Voltage Burden (Current)

1.25 VDC maximum

# **Common Mode Rejection**

120 dB minimum

## **Input Loop Power Supply**

15 VDC nominal, regulated, 25 mADC Max. ripple, less than 10 mVRMS

May be selectively wired for sinking or sourcing mA input

### LoopTracker

Variable brightness LEDs indicate I/O loop level and status

# **DC Output Range**

Factory configured, please specify output range

Voltage, 10 mA max .: 0-1 VDC to 0-10 VDC Voltage, M09 option: 0-10 VDC to 0-20 VDC Bipolar voltage: ±1 VDC to +10 VDC Current: 0-1 mADC to 0-20 mADC 20 V compliance, 1000  $\Omega$  at 20 mA

# **Output Calibration**

Multi-turn zero and span potentiometers ±15% of span adjustment range typical

# **Output Loop Power Supply**

20 VDC nominal, regulated, 25 mADC, <10 mVRMs max. ripple May be selectively wired for sinking or sourcing mA output

# **Output Test/Override**

Front button sets output to test level when pressed or via external contact closure

Potentiometer adjustable 0-100% of span

# **Output Ripple and Noise**

Less than 10 mVRMs ripple and noise

# Linearity

Better than ±0.1% of span

# **Ambient Temperature Range and Stability**

-10°C to +60°C operating ambient

Better than ±0.04% of span per °C stability

# Response Time

70 milliseconds typical

# Isolation

1200 VRMs minimum

Full isolation: power to input, power to output, input to output

# **Housing and Connectors**

IP 40, requires installation in panel or enclosure For use in Pollution Degree 2 Environment Mount vertically to a 35 mm DIN rail

Four 4-terminal removable connectors, 14 AWG max wire size

# Power

85-265 VAC, 50/60 Hz or 60-300 VDC, 2 W maximum D versions: 9-30 VDC or 10-32 VAC 50/60 Hz, 2 W maximum



Sink or Source

mA Output

Terminals for Remote Output Test/Override

Output LoopTracker

LED

Adjustable Output

Test/Override

Function

Zero and Span for

Output

Input LoopTracker

I FD

Sink or Source

mA Input

Universal

Power

1 2 3 4

2 3









### **Dimensions**

0.89" W x 4.62" H x 4.81" D 22.5 mm W x 117 mm H x 122 mm D Height includes connectors

# Description

The APD 4300 accepts a DC voltage or current input and provides an optically isolated DC voltage or current output that is linearly related to the input.

Typical applications include signal isolation, conversion, boosting or a combination of the three. Full 3-way isolation (input, output, power) makes this module useful for ground loop elimination, common mode signal rejection or noise pickup reduction.

The APD 4300 can be factory configured for 4-20 mA input and 4-20 mA output to solve signal isolation, ground loop, common mode, or noise pickup problems for non-isolated PLC inputs.

For maximum versatility loop excitation power supplies are included for the input and output. A mA input and a mA output can be selectively wired for sinking or sourcing. This allows the APD 4300 to work with any combination of sinking or sourcing mA transmitters and sinking or sourcing mA receiving devices.

# 11 12 14 15 16 Custom I/O Ranges

See Wiring Diagrams on **Next Page** 

# LoopTracker

API exclusive features include two LoopTracker LEDs (green for input, red for output) that vary in intensity with changes in the process input and output signals. These provide a quick visual picture of your process loop at all times and can greatly aid in saving time during initial startup and/or troubleshooting.

# **Functional Test**

An API exclusive feature includes the Functional Test Button to provide a fixed output (independent of the input) when held depressed. The test output level is potentiometer adjustable from 0 to 100% of output span. The functional test button greatly aids in saving time during initial startup and/or trouble-

The functional test can also be enabled with a customersupplied external contact closure across terminals 5 and 6. This allows remote testing of the output or, for example, a PLC-controlled manual override setting.

# **How to Order**

# All models are factory ranged

The APD 4300 is configured to your specifications. Milliamp inputs and outputs can be field wired for sink or source.

# Please specify

Model Input range Output range Options as required

Model	Input	Output	Power
APD 4300	Factory configured—specify	Factory configured—specify	85-265 VAC or 60-300 VDC
APD 4300 D	input range	output range	9-30 VDC or 10-32 VAC

# Options-add to end of model number

M01 Input/output reversal, such as 4-20 mA input to 20-4 mA output

M09 High voltage output up to 20 V (specify range) DF Fast response time, consult factory. DF option will cause output noise levels to be greater than standard specifications.

U Conformal coating for moisture resistance Accessory—order as separate line item

API BP4 Spare 4-terminal plug, black

### **Precautions**

WARNING! All wiring must be performed by a qualified electrician or instrumentation engineer. See diagram for terminal designations and wiring examples. Consult factory for assistance.

WARNING! Avoid shock hazards! Turn signal input, output, and power off before connecting or disconnecting wiring, or removing or installing module.

### **Précautions**

ATTENTION! Tout le câblage doit être effectué par un électricien ou ingénieur en instrumentation qualifié. Voir le diagramme pour désignations des bornes et des exemples de câblage. Consulter l'usine pour assistance.

ATTENTION! Éviter les risques de choc! Fermez le signal d'entrée, le signal de sortie et l'alimentation électrique avant de connecter ou de déconnecter le câblage, ou de retirer ou d'installer le module.

API maintains a constant effort to upgrade and improve its products. Specifications are subject to change without notice. See api-usa.com for latest product information. Consult factory for your specific requirements.



WARNING: This product can expose you to chemicals including nickel, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to www.P6SWarnings.ca.gov

# Ranges

APD  $\bar{4}300$  I/O ranges are set at the factory and must be specified when ordering. Listed below are commonly ordered input and output ranges. Consult factory for other available ranges or special ranges. See the model/serial number label for module information, options, and I/O range information.

Common Voltage Inputs					
0-100 mV	1-5 V	±200 mV			
0-200 mV	0-10 V	±500 mV			
0-500 mV	0-20 V	±1 V			
0-1 V	0-50 V	±2 V			
0-2 V	0-100 V	±5 V			
0-5 V	±100 mV	±10 V			
Common Current Inputs					
0-1 mA	0-20 mA	0-100 mA			
0-10 mA	4-20 mA	0-200 mA			
0-16 mA	10-50 mA	0-500 mA			
Common Voltage Outputs					
0-1 V	1-5 V	±5 V			
0-5 V	0-10 V	±10 V			
Common Current Outputs					
0-20 mA	0-16 mA	4-20 mA			

# Input

Polarity must be observed when connecting the signal input.

For a transmitter with a current output, determine if it provides power to the current loop or if it must be powered by the APD module. Use a multi-meter to check for voltage at the transmitter output terminals. Typical voltage may be in the range of 9 to 24 VDC. In this case, wire the device to terminals 9 and 11.

Type of Input Device	– Terminal	+ Terminal
Sensor or transmitter with a voltage output.	9 (–)	11 (+)
Transmitter with a mA (current) output that provides power to the current loop. Typically a 3 or 4-wire device.	9 (–)	11 (+)
Transmitter with mA (current) out- put that is unpowered. Typically a 2-wire device. APD module provides loop power.	11 (–)	10 (+15 VDC)

# Output

Polarity must be observed when connecting the signal output.

If your device requires a current input, determine if it provides power to the current loop or if it must be powered by the APD module. Use a multi-meter to check for voltage at the input terminals. Typical voltage may be in the range of 9 to 24 VDC. In this case, wire the device to terminals 2 and 4.

Device Connected to Output	– Terminal	+ Terminal
Measuring or recording device accepts a voltage input.	3 (–)	4 (+)
Measuring/recording device accepts a mA (current) input and the input is unpowered or passive. APD module provides the loop power.	3 (–)	4 (+20 V)
Measuring or recording device accepts a mA (current) input and provides power to the current loop.	2 (–)	3 (+)

# **Module Power Terminals**

Check model/serial number label for module operating voltage to make sure it matches available power.

When using DC power, either polarity is acceptable, but for consistency with similar API products, positive (+) can be wired to terminal 13 and negative (-) can be wired to terminal 16.

The power supplies are fuse protected and the unit may be returned to API for fuse replacement.

# Mounting to a DIN Rail

Install module vertically on a 35 mm DIN rail in a protective enclosure away from heat sources. Do not block air flow. Allow 1" (25 mm) above and below housing vents for air circulation.

- 1. Tilt front of module downward and position against DIN rail.
- 2. Clip lower mount to bottom edge of DIN rail.
- Push front of module upward until upper mount snaps into place.

### Removal

- 1. Push up on the bottom back of the module.
- Tilt front of module downward to release upper mount from top edge of DIN rail.
- 3. The module can now be removed from the DIN rail.

### Calibration

Input and output ranges are pre-configured at the factory as specified on your order. Front-mounted, Zero and Span potentiometers can be used to calibrate the output to compensate for load and lead variations.

- Apply power to the module and allow a minimum 20 minute warm up time.
- Using an accurate calibration source, provide an input to the module equal to the minimum input required for the application.
- 3. Using an accurate measurement device for the output, adjust the Zero potentiometer for the exact minimum output desired. The Zero control should only be adjusted when the input signal is at its minimum. This will produce the corresponding minimum output signal. For example: 4 mA for a 4-20 mA output or -10 V for a ±10V output.
- 4. Next, set the input at maximum, then adjust the Span pot for the exact maximum output desired. The Span control should only be adjusted when the input signal is at its maximum. This will produce the corresponding maximum output signal. Example: for 4-20 mA output, the Span control will provide adjustment for the 20 mA or high end of the signal.
- 5. Repeat adjustments for maximum accuracy.

# **Output Test Function**

The test button may be used to drive the device on the output (a panel meter, chart recorder, etc.) with a known good signal that can be used as a system diagnostic aid during initial start-up or during troubleshooting.

When depressed it will drive the output with a known good signal. When released, the output will return to normal.

You can also enable the test function by connecting an external switch or button to terminals 5 and 6. This can be used as a remotely operated manual override to set the output at a fixed value recardless of the input sional.

The Test Cal. potentiometer can be used to set the test output to the desired level. It is factory set to provide approximately 50% output. It is adjustable from 0 to 100% of the output span. Press and hold the Test button and adjust the Test Cal. potentiometer for the desired output level. When released, the output will return to normal.

# Operation

The APD 4300 is factory configured to your exact input and output requirements. The input is filtered, either amplified or attenuated as required, then passed through to the output stage.


The green LoopTracker® input LED provides a visual indication that a signal is being sensed by the input circuitry of the module. It also indicates the input signal strength by changing in intensity as the process changes from minimum to maximum.


If the LED fails to illuminate, or fails to change in intensity as the process changes, check the module power or signal input wiring. Note that it may be difficult to see the LEDs under bright lighting conditions

The red LoopTracker output LED provides a visual indication that the output signal is functioning. It becomes brighter as the input and the corresponding output change from minimum to maximum

For current outputs, the red LED will only light if the output loop current path is complete. For either current or voltage outputs, failure to illuminate or a failure to change in intensity as the process changes may indicate a problem with the module power or signal output wiring.



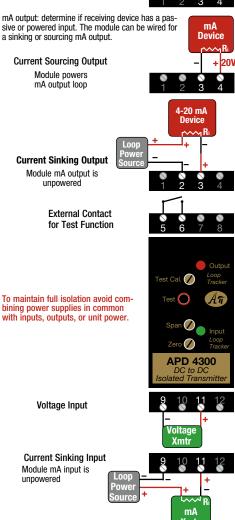

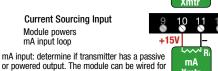

Cu 60/75°C conductors 14 AWG 13 F

max

a sinking or sourcing mA input.

13 Power AC or DC + = = 14 Earth Ground 16 Power AC or DC –

